

## Nissan 350Z Z33 VQ35DE 03-06 Carbon Fiber Intake Kit



1. Overview Engine Bay with Stock set up Intake



2. Remove the Clamp on Throttle Body



3. Remove the 2 Bolts on MAF Sensor



4. Remove the Lower Vacuum Hose



5. This is Over View of Carbon Fiber Intake Kit (Air Filter is Not Show / use any brand 3" Inlet Air Filter with this Intake Kit)



6. Install the 3" Silicone Hose with 2 Clamps to the Throttle Body



7. Connect the Stock Lower Vacuum Hose to the New Carbon Fiber Intake Pipe at Lower section



8. Than Mount the Carbon Fiber Intake Pipe to the Silicone Hose to the Throttle Body Side






9. Mount the Stock MAF Sensor Tube with 3" Silicone Hose with 2 Clamps



10. Pre-Mount the 4 Bolts to the MAF Adapter



11. Mount the Stock MAF Sensor back on the Stock MAF Sensor Tube and Install the Aluminum MAF Adapter the Stock Tube using the 4 bolts as illustrated above step

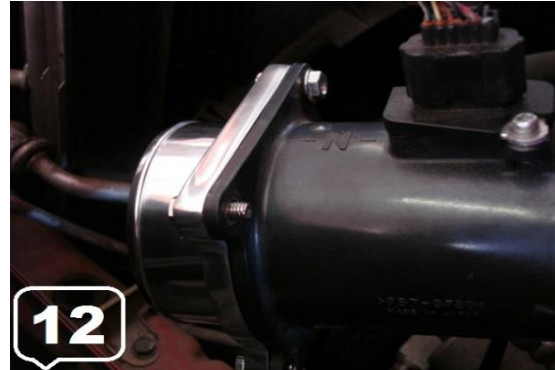

12. Back View of the MAF Adapter Bolts Mounted



13. Then you can use any Brand Open Element Air Filter with this Carbon Fiber Intake Kit (Air Filter must be in 3" Inlet) We used K&N 3" Filter for this Kit




14. Front View of Installed Carbon Fiber Intake Kit



15. Left Side View




16. Right Side View

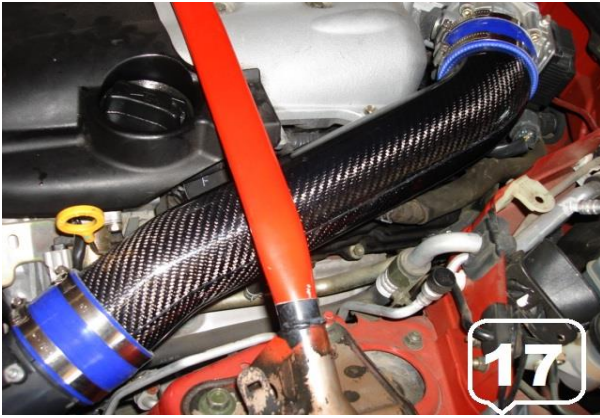

17. Top Section View



18. Lower Section View

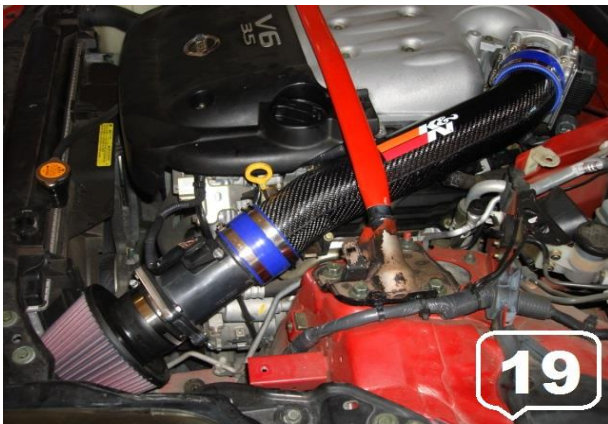

19. Overall View