


Scion FRS / Subaru BRZ / Toyota GT86 Carbon Fiber Intake Installations

Very Simple Installation 15 minutes to 25 minutes max / Enjoy the New Carbon Fiber Intake Pipe.

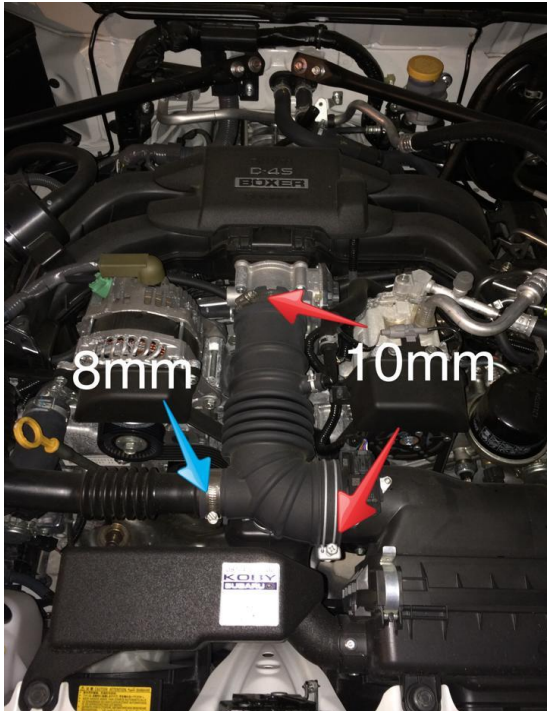

#1 Remove these Stock Clamps using 8mm and 10mm sockets to take out the stock Rubber Hose

#2 After Stock Rubber Hose removed compared side by side with New Carbon Fiber Pipe



#3 Connect all 3 Silicone Hoses supplied with the Carbon Fiber Intake Kit with T-Bolt Clamps / Than make sure all clamps are secured