


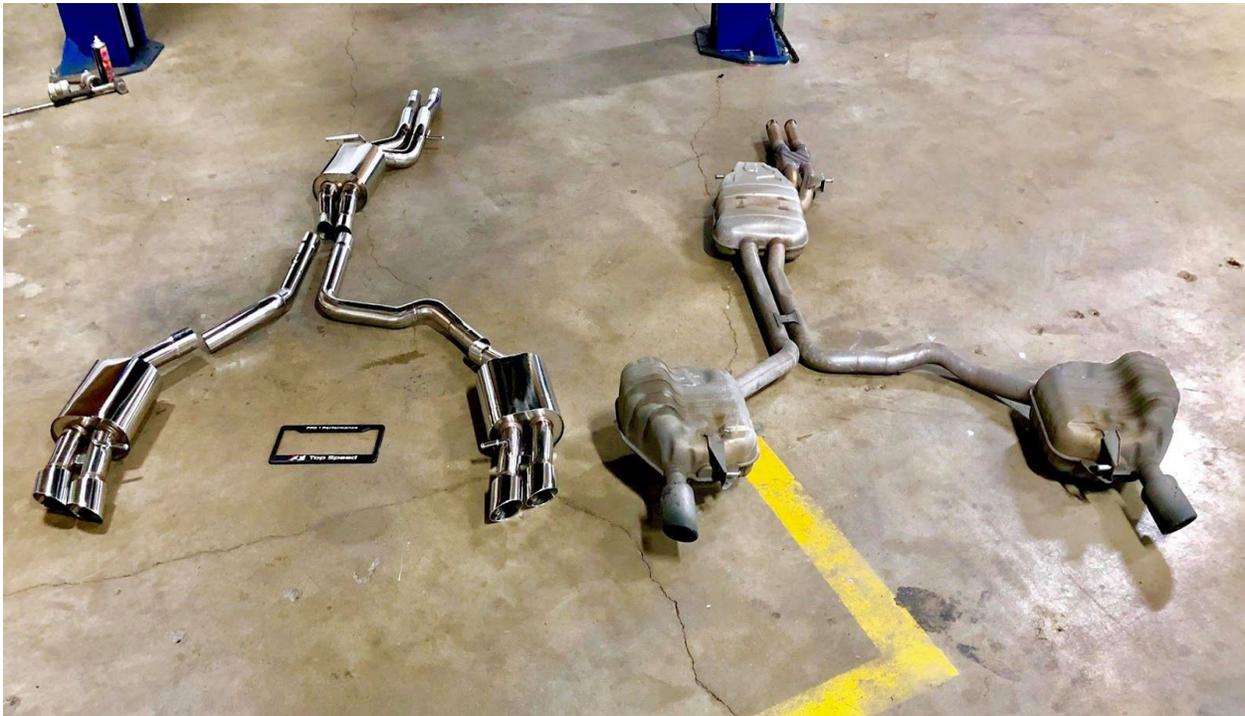

Top Speed Audi A6/A7 Catback Install


DISCLAIMER: Please read the instructions before installation very carefully. Ensure all necessary components are available. Top Speed shall hold no liability for any violation against local vehicle regulations or laws. Parts should only be installed by experienced automotive mechanics who have the necessary skill, training and tools to do the job correctly and safely. Incorrect installation can result in personal injury, vehicle damage and/or loss of vehicle control and may potentially damage the product. Any parts modified and/or damaged will void the product from warranty. Replace any loose or worn parts before beginning. Always use appropriate safety devices to support the weight of the vehicle while servicing any components and avoid any uneven road surfaces. Install at your own risk. Detailed Installation procedures vary heavily from vehicle to vehicle. This installation sheet should only be viewed as a general installation instruction. Top Speed is not responsible for damages for any reason in reliance of site information. Apply at your own risk. Professional installation is always highly recommended. Note: All Top Speed Pro 1 products are used for racing cars, vehicles operating on non-normal road conditions and also vehicles for demonstration purposes. Top Speed Pro 1 will hold no liability for the ban of this product due to local regulations or laws. Purchasers shall bear full liability for component installation. Top Speed Pro 1 also will not hold liability for any damage or death caused directly or indirectly from this product nor any installation error, including errors due to inadvertence.

- For Dual Exhaust System: If you tighten the nuts & bolts on the exhaust on one side and move on to the other side, the exhaust on the left and right will not line up evenly and will be off in position. Please tighten the nuts & bolts in rotation. Right → Left → Right → Left and adjust the position of exhaust and exhaust hangers before tightening both side exhaust nuts & bolts. For best results have a helper to stand behind the rear of your car to visually direct you to perfect installation.



Audi A6/A7 Catback Install

Step 1. Spray WD-40 on 6 hangers that are holding the stock exhaust.

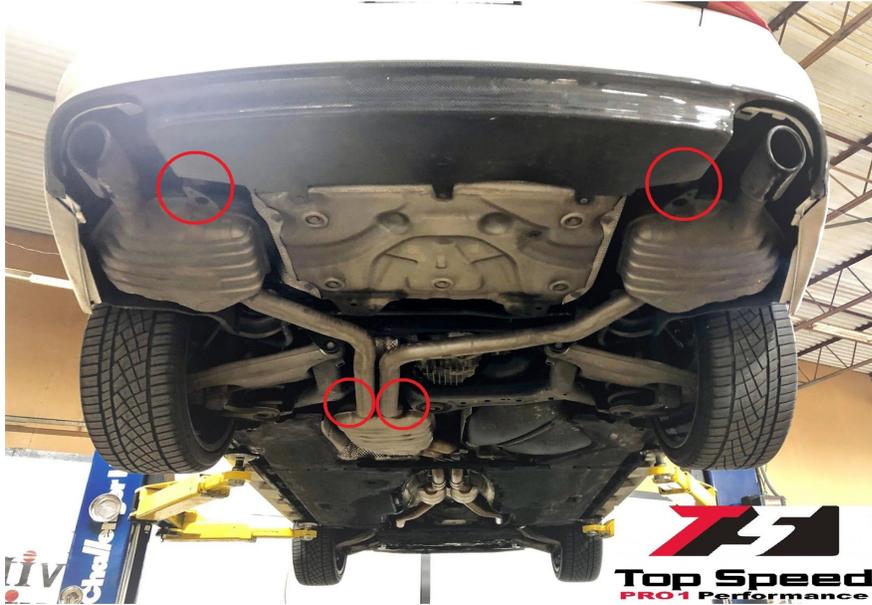


Step 2. Loosen the rear clamps.





Top Speed Audi A6/A7 Catback Install


Step 3. Carefully begin to remove the hangers starting with 1 and 2 moving onto 3 and 4.
-Use reference image below

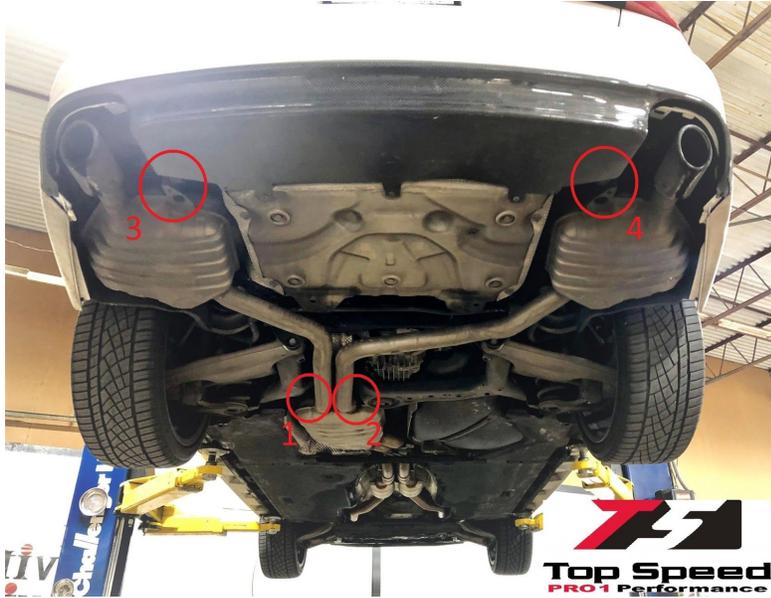


Audi A6/A7 Catback Install

Step 4. After you have disconnected all the hangers and have loosen the bolts you should be able to start to pull the exhaust out the rear.

Step 5. Once you have removed the stock exhaust you want to reverse the steps and start to re install the new exhaust starting with the rear clamps numbered 1 and finish with installing the rubber hangers labeled 2.

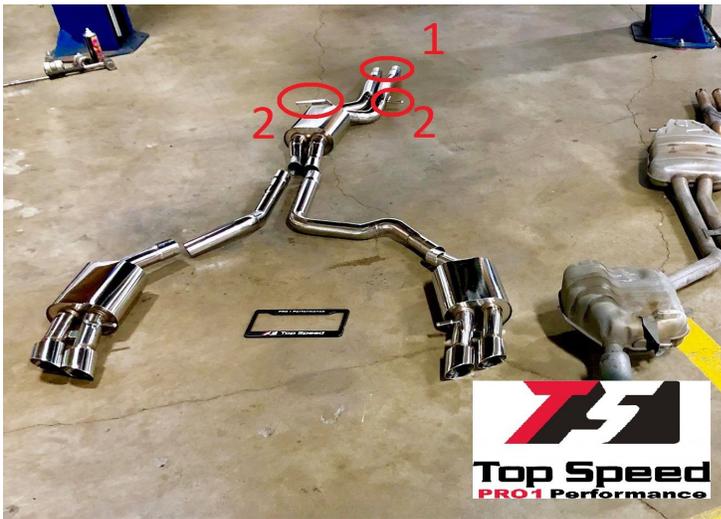

Step 6. Remember to leave clamps slightly loose. Slide a clamp over pipe labeled 1 and continue with either the left or right. Loosely tighten clamp to hold pipe so you can continue to instal the rear muffler section labeled 2, don't forget to slide clamp over pipe before connecting. Install rubber hanger labeled 3. Repeat to side you have not done

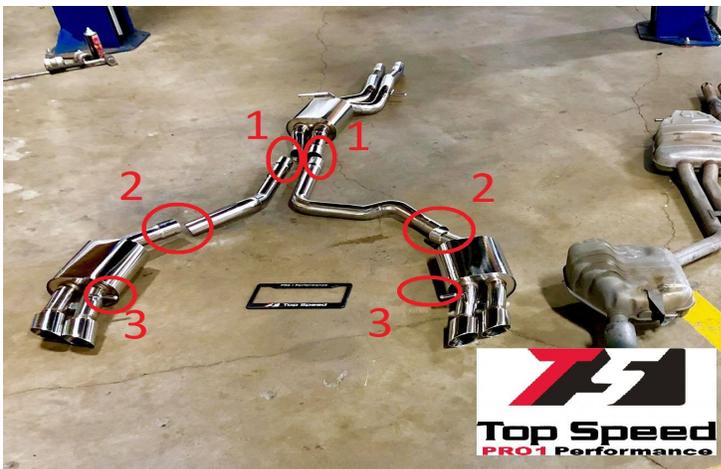



Audi A6/A7 Catback Install

Step 7. Once everything is on, check placement and make sure nothing is hitting before you tighten the bolts down. Note: Some places to check

- Next to the secondary pipes and the sub-frame. Make sure there is space all around the pipes.
- Heat Shield: If it's in the way just push/bend enough to clear a little space.
- The bar below the mid-pipe sometimes gets bent from driving, just bend it to clear a little space so it's not laying on top of the bar.

Step 8. Snug down the bolts that are connected to the mid-pipe

Step 9. Adjust the mufflers how you like by pushing one side up or down and snug down the bolts.

- It's helpful to have a friend hold the muffler in the position you like and start tightening down the bolts.
- Note: Use floor jack handle or similar to insert inside muffler to help maneuver the exhaust to fit in desired location then tighten bolts.
- Note: when you're underneath the car things look different than they do on the ground. Once you look at it, at a common angle it will look fine.

Step 10. After you have tightened all the bolts down, check for rattles.

Step 11. Turn the car on and check for any leaks. Be careful as it can get hot if left on for too long



Top Speed Audi A6/A7 Catback Install

